






# ABS PUMP DISPENSER HOLDER - PDB

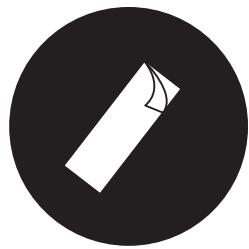

Installation guide • Guida d'installazione • Guide d'installation • Guía de instalación • Installation – Handbuch

Components provided in the box • Componenti forniti nella scatola • Composants fournis dans la boîte • Componentes proporcionados en la caja • Komponenten im Lieferumfang enthalten

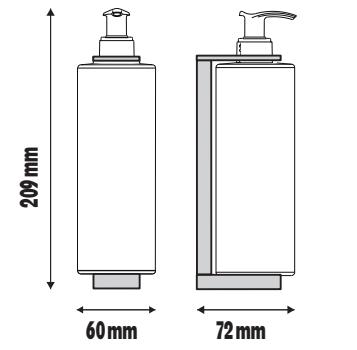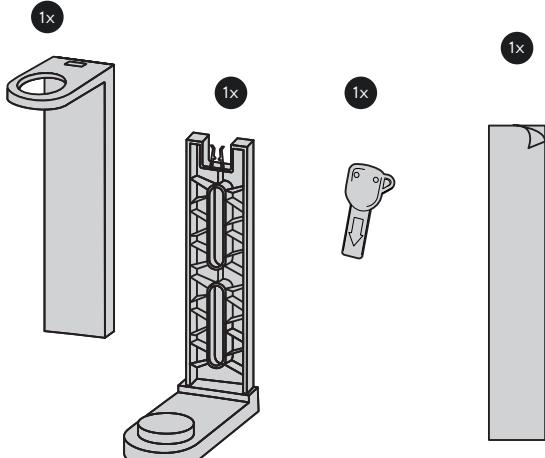

Tools needed • Strumenti necessari • Outils nécessaires • Herramientas necesarias • Werkzeuge erforderlich



## Installation procedure • Procedura d'installazione • Procédure d'installation • Procedimiento de instalación • Installationsverfahren

1




altre lingue  
andere Sprachen  
otros idiomas  
autres langues

The adhesive strength of tape can be influenced by various factors such as cleaning, the temperature during the application, the roughness of materials, and the contact surfaces of the adhesive with materials. For optimal and secure adhesion, surfaces must be clean, dry, compact, and at room temperature.

Notice: Never use ethyl alcohol and cleaning products containing silicones as they lessen the effectiveness of the adhesion.


To clean surfaces with generic contaminants such as dust, dirt, and surface residues, use a 50/50 solution of isopropyl alcohol and water. Wipe the surface right before applying the tape, even if it has been cleaned previously. Ensure the surfaces are dry before applying the tape.  
Apply tape on flat surfaces only, avoiding grout and sealant lines in tile.

**YES** isopropyl alcohol  
**NO** ethyl alcohol


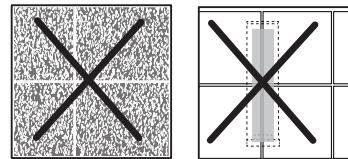


**NO**  
painted  
wall

>20°  
room  
temperature

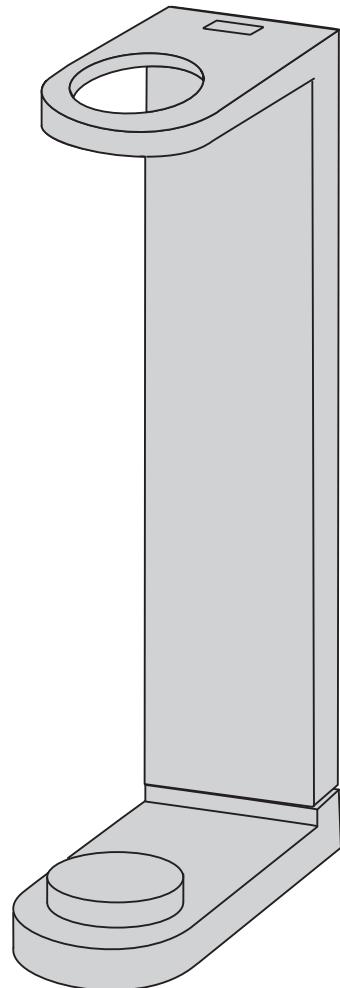

2

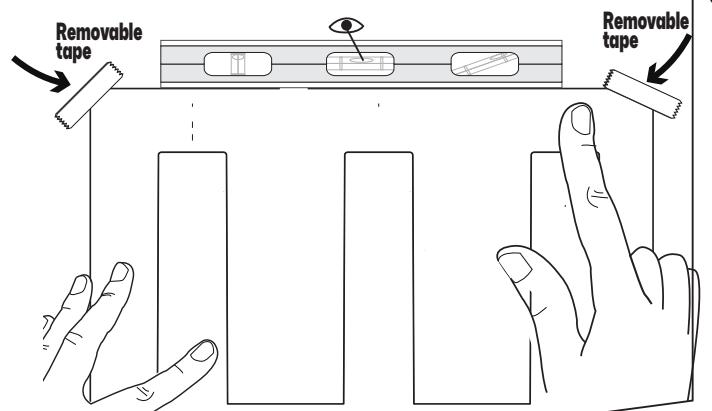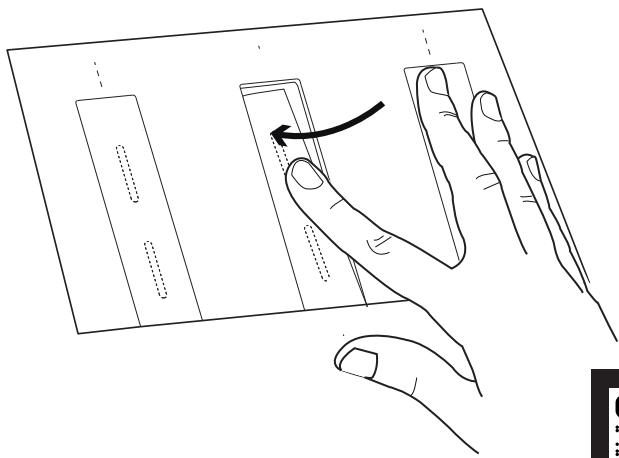

video tutorial




3

Positioning  
Guide



# ABS PUMP DISPENSER HOLDER - PDB

Installation guide • Guida d'installazione • Guide d'installation • Guía de instalación • Installation – Handbuch

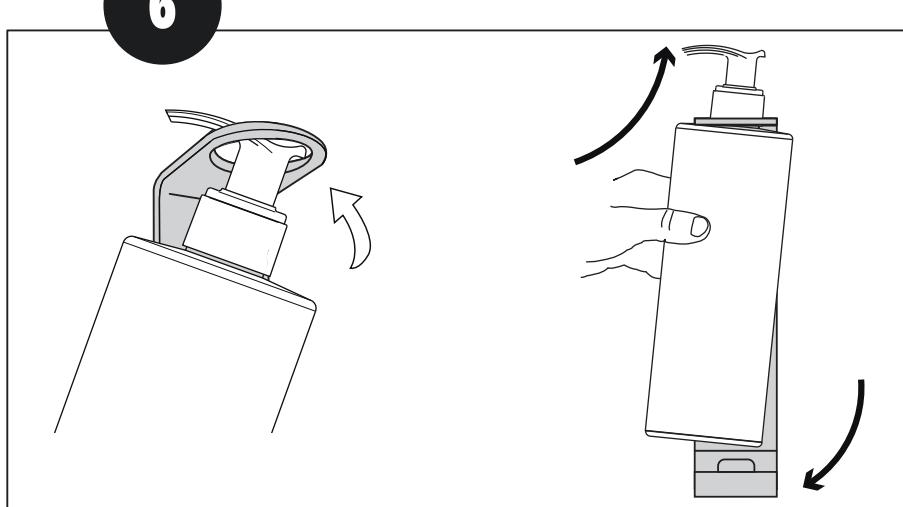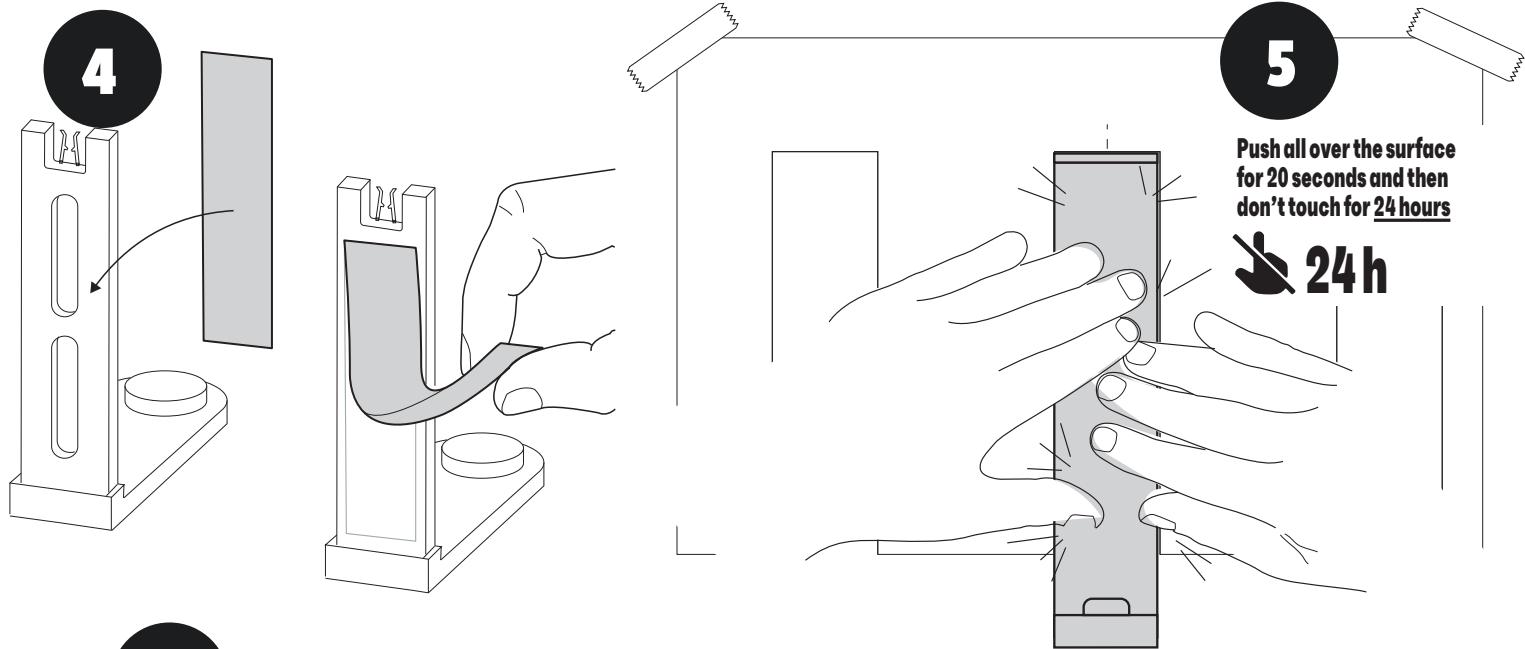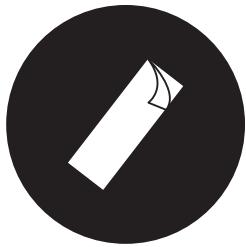

**change  
the cartridge**

**7**

